



## 2.0kW Free Standing Patio Heater

### IMPORTANT

These instructions should be read carefully and left with the used of the product for future reference.

### Product safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure that curtains are at least 900mm (3") from the top of the heater.
- Do not place on soft surfaces.
- Do not cover whilst the unit is in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the heater in locations where paint, petrol or other flammable liquids are used or stored.
- Do not insert any object into the heater through the grilles. This may damage the heater or result in over heating or electric shock.
- If used outdoors, the heater must be connected via a Residual Current Device (RCD) rated at 30mA or less.
- The heater must not be connected to a timer or other type of programmable switch (a fire hazard exists if the heater is covered when the timer switches on).

### Operation

- Plug the mains lead into a 13 amp mains socket that is protected by a 30mA Residual Current Device (RCD). Never use equipment outdoors that is connected to a socket that is not protected by an RCD.
- If connecting via an extension lead, make sure that the lead is rated at 10 amps or more, and that it is fully unwound.
- Switch the unit on at the mains socket.
- Pull the cord-operated switch to select the required operation:  
Figure "1" displayed = Low heat (1000W)  
Figure "2" displayed = High heat (2000W)

- Do not touch the grille which the heater is in operation because it will be hot and may cause burns.
- Unplug the heater from the mains when not in use.
- To adjust the angle, switch off the heater and allow it to cool for 15 minutes. Slacked the pivot screw, and adjust the reflector to the preferred angle. Re-tighten the screw. The heater may now be switched on.
- To adjust the height, loosen the black locking nut at the top of the pole and slide the telescopic section of the pole to the preferred height. Re-tighten the black locking nut.

### Maintenance

Before cleaning, turn the heater off and disconnect from the mains supply. The heater may then be cleaned using a damp cloth with a drop of washing up liquid to remove any dust or dirt from the casing. Do not use any stronger detergents or solvents as these may damage the paint finish.

Using a dry 1" (25mm) paint brush, remove any dust from the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced proceed as follows:

- Connect the brown wire to the terminal labelled 'L'
- Connect the blue wire to the terminal labelled 'N'
- Connect the green/yellow wire to the terminal labelled with the earth symbol or 'E'

Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

### Storage

When not in use, or during inclement weather, the black fabric dirt and dust protector should always be deployed. Always make sure that the heater is unplugged and cannot be accidentally switched on when the dirt and dust protector is being used.

### Technical specification

Dimensions (wall mounting)	535 x 355 x 245 mm
Weight	2kg
Power supply	230v AC
Power consumption	2000W
Operating current	8.7A