



2.7kW 360° Electric Patio Heater

Important

These instructions should be read carefully and left with the user of the product for future reference.

Before use

You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, DO NOT use it, and contact London Cool immediately.

Operation

Plug the mains lead into a 13 amp mains socket that is protected by a 30mA residual current device (RCD). Never use equipment outdoors that is connected to a socket that is not protected by an RCD.

If collecting via an extension lead, make sure that the lead is rated at 13 amps, and that it is fully unwound.

If the socket or extension lead is outdoors then a suitably waterproof connector must be used.

Switch the unit on at the mains socket.

The three push-button switches labelled H1, H2 and H3 control the three heating elements. Press to turn on, press again to turn off. The circular indicator beneath the heating element illuminates if the element is switched on – this makes it possible to tell if an element is switched on before it has reached operating temperature, or if it is switched off and has yet to cool down.

The push-button labelled L controls the lamp at the top of the appliance. Press to turn on: press again to turn off.

Do not touch the fireguards when the heater is in operation, because they will be hot and may cause burns.

Unplug the heater from the mains when not in use.

Product safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Ensure that curtains and other flammable materials are at least 600mm (2") from the top and 1.5m from the sides of the heater.
- Do not use unless correctly installed.
- Do not cover when in use. This symbol shown on the casing of the heater means that the heater should not be covered when in use.
- Do not place the mains lead beneath a carpet or rug.
- Do not use the heater in locations where paint, petrol or other flammable liquids are used or stored.
- Do not insert any object into the heater through the grilles. This may damage the heater or result in overheating or electric shock.
- If used outdoors, the heater must be connected via a residual current device (RCD) rated at 30mA or less.
- Do not use this heater in the immediate surroundings of a bath, shower, Jacuzzi, hot-tub, swimming pool, pond or water feature.
- Not suitable for use in boats, caravans or similar locations.
- This heater must not be connected to a timer or other type or programmable switch (a fire hazard exists if the heater is covered when the timer switches it on).
- Do not touch the fireguard when the heater is in use, as it is hot and may cause burns.
- The fireguard of this heater is intended to prevent direct access to the heating elements and must be in place when the heater is in use.
- The fireguard does not give full protection for young children and for infirm persons.

Maintenance

Before cleaning, turn the heater off, disconnect from the mains supply and allow to cool down. The heater may then be cleaned using a damp cloth with a drop of washing up liquid to remove any

dust or dirt from the casing. Do not use stronger detergents or solvents as these may damage the paint finish.

Using a dry 1" (25mm) paint brush, remove any dust from, the grilles.

If the mains lead is damaged, it must be replaced by the manufacturer or an authorised service centre. If the mains plug needs to be replaced, proceed as follows:

- Connect the brown wire to the terminal labelled 'L'
- Connect the blue wire to the terminal labelled 'N'
- Connect the green/yellow wire to the terminal labelled with the earth symbol 'E'
- Make sure that the cord-grip is positioned correctly (over the outer sheath of the cable) and it fully tightened.

Technical specification

Dimensions	418 x 388 x 1668 mm
Weight	12kg
Power Supply	230V~
Power Consumption (max)	2728 W
Operating Current	11.9 A
IP rating	IP34